



Parts List

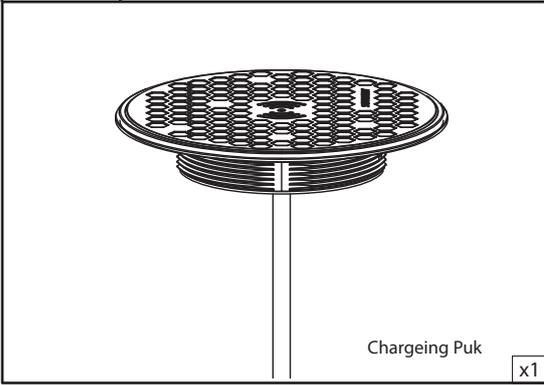

Chargeing Puk

x1

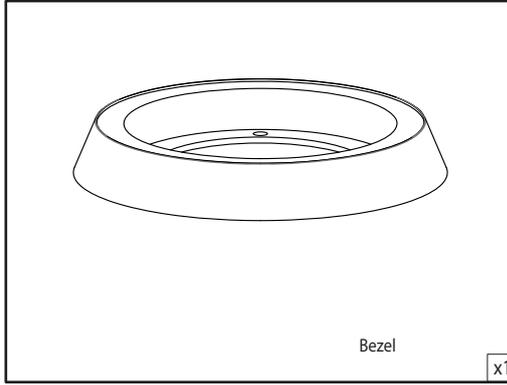


Bezel

x1


Tools Required

	10mm (3/8") Drill
	Power drill
	Alcohol Wipe


1 Drill hole 64/65mm (2.5")

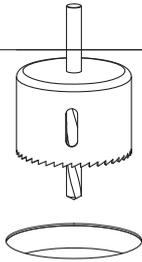


2 Remove Self-Adhesive backing from bezel.

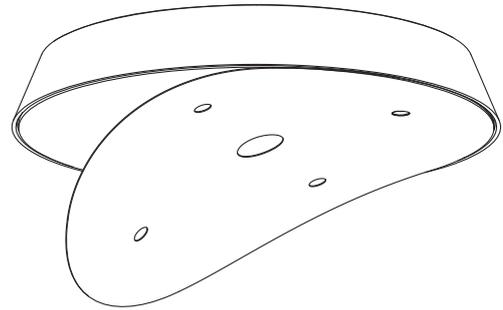


3 Ensure Surface is free from dirt or grease and install bezel.

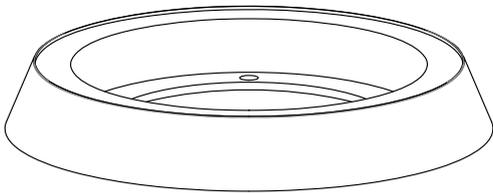

4 Remove self adhesive backing from charging puk.

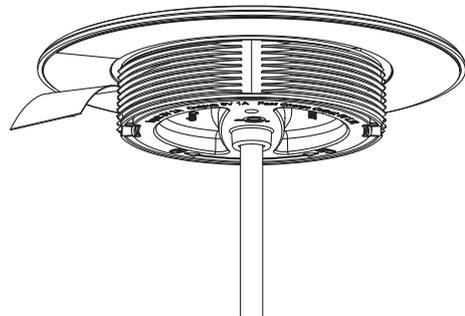

5 Install charging puk into bezel.

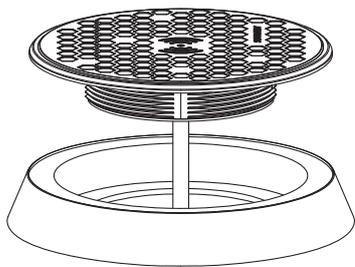

6 Connect wires to 12-24V supply, use solder tubes provided for a sealed joint.

